
Hierarchy of Energy Controls

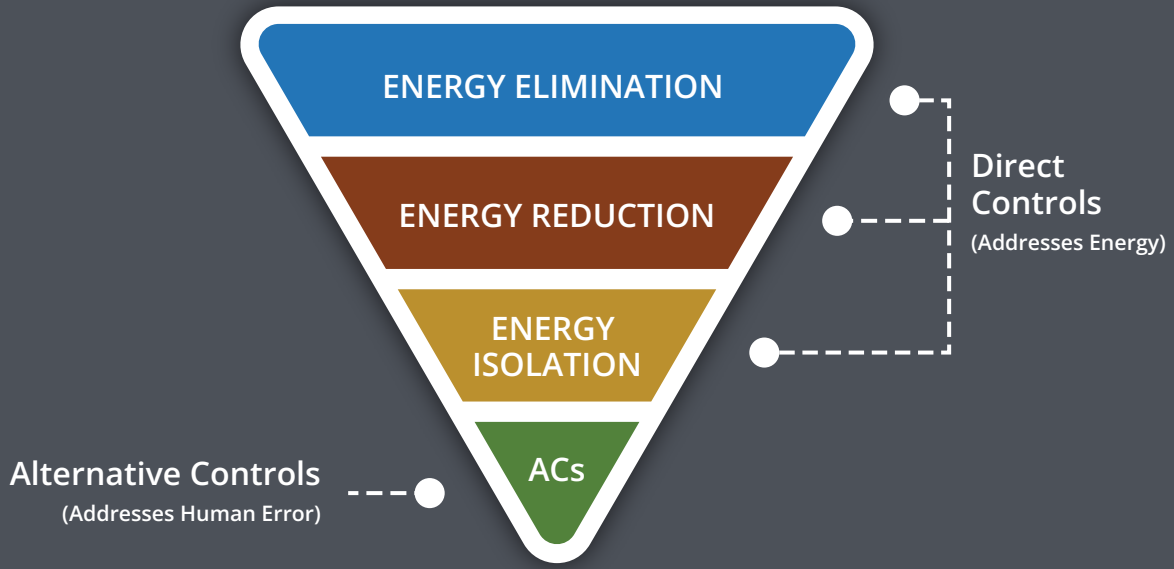

Direct Controls are specifically designed to mitigate energy


A Direct Control has 3 key requirements:



Specifically targeted to the High Energy source



Effectively mitigates exposure to High Energy when installed, verified, and used properly

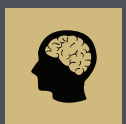

Effective when someone makes a mistake

Alternative Controls are specifically designed to mitigate human error

When a Direct Control is not feasible, there must be at least 2 Alternative Controls, from at least 2 or more of the following categories:



Physical Obstacle

An obstruction that blocks the path or hinders progress toward a high energy hazard



Dedicated Monitoring

Devoted and continuous attention to the high energy hazard



Visual Reminder

A visible warning of the presence of the high energy hazard

Scan QR code for more information and applicable rules.

CSRA CONSTRUCTION SAFETY RESEARCH ALLIANCE